


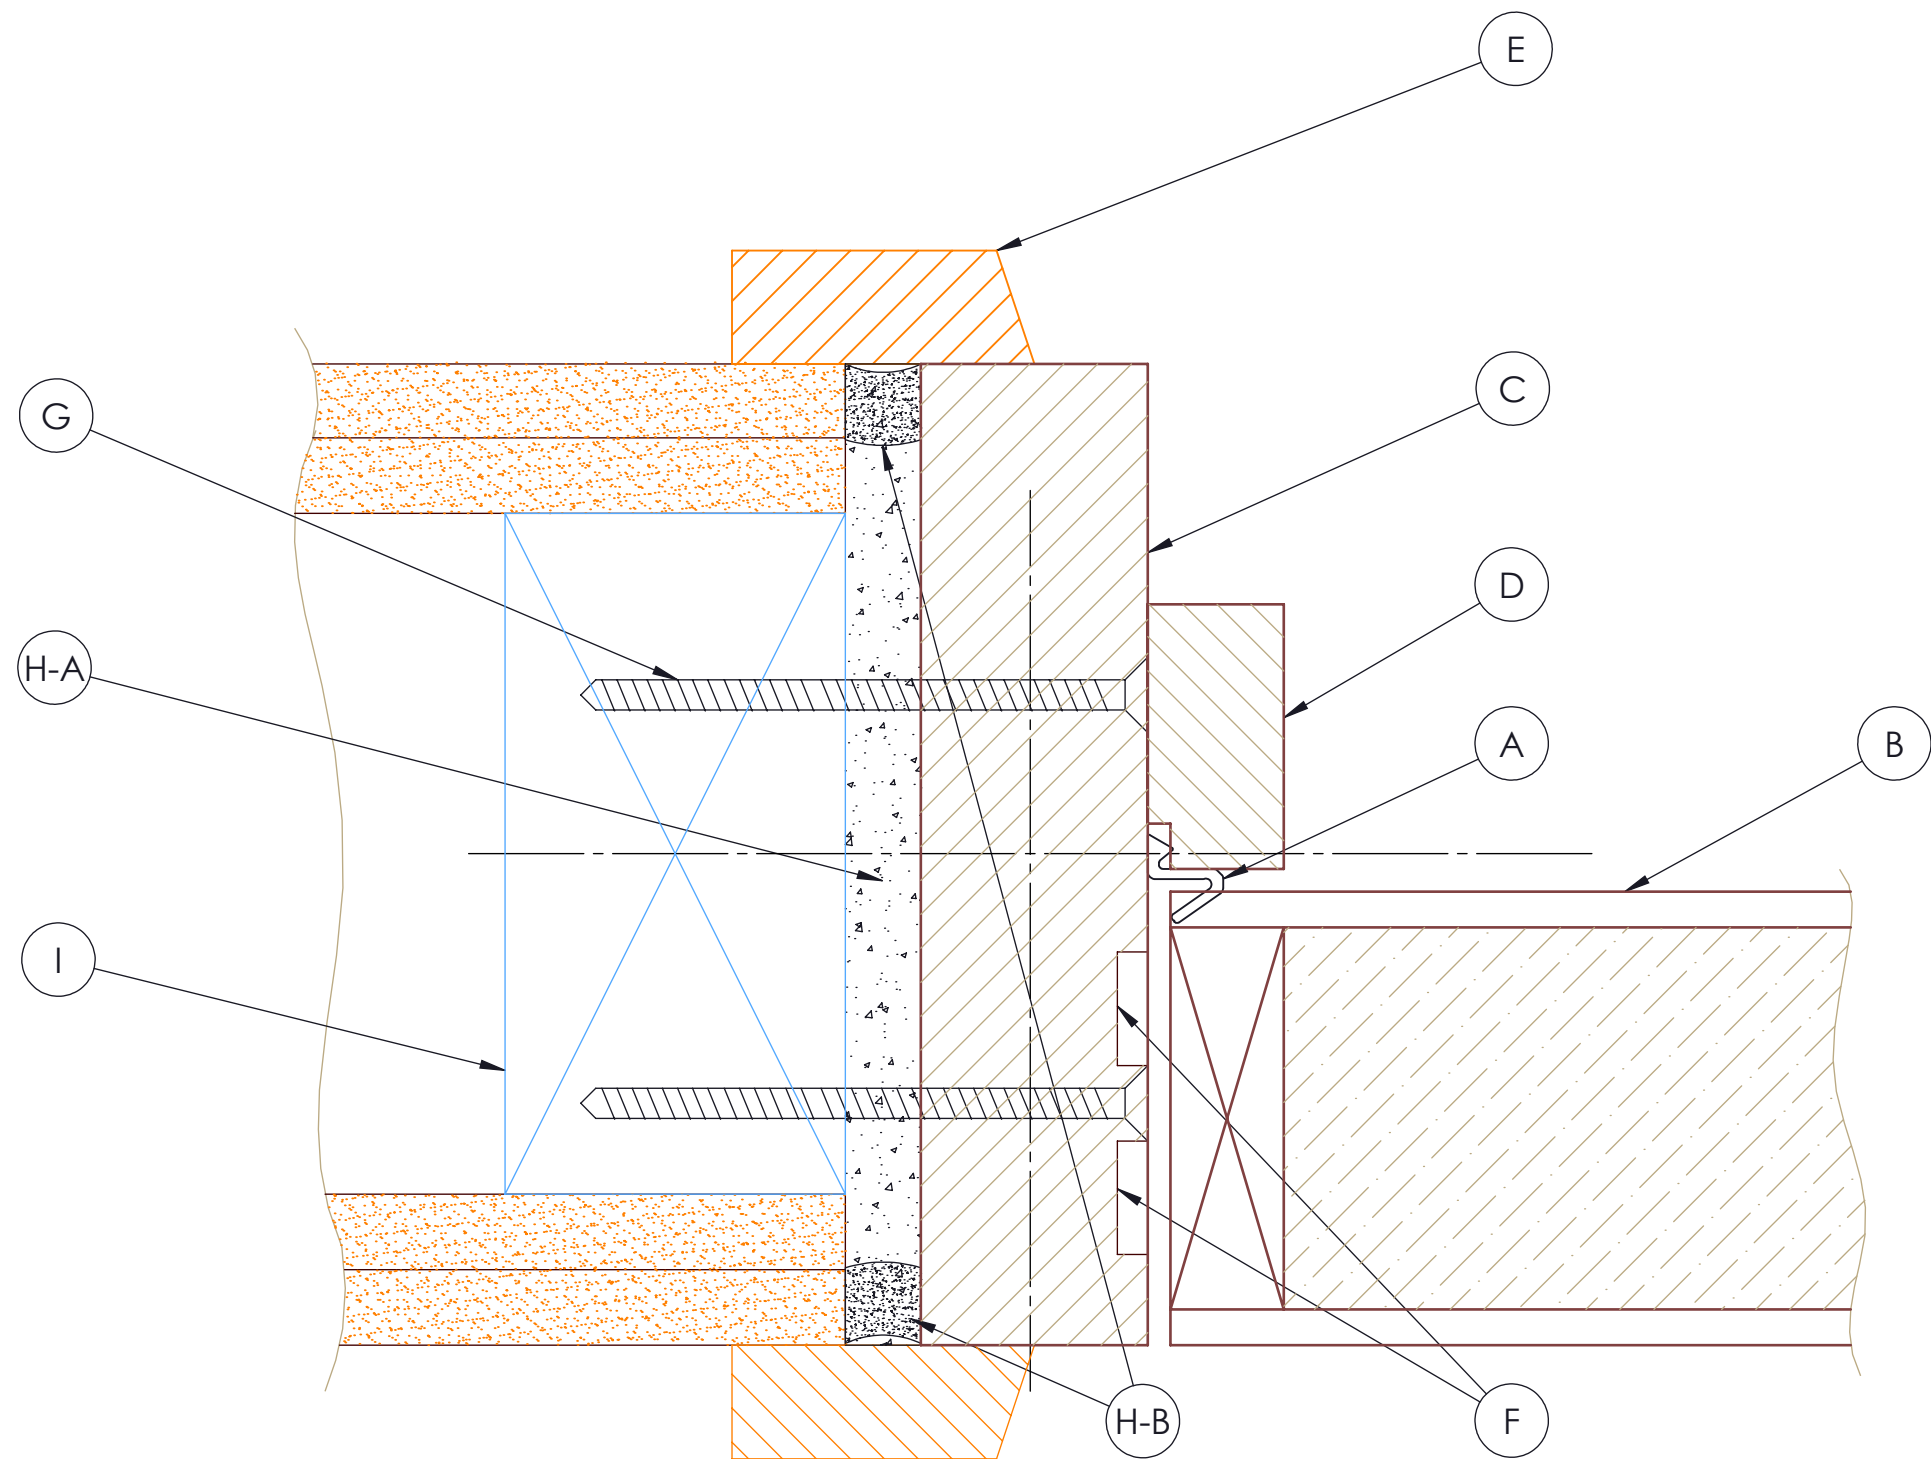

A	SQ21
B	60mm FUTURA DOOR
C	TIMBER JAMB (30 or 42 mm)
D	TIMBER DOOR STOP (35 X 18R)
E	TIMBER ARCHITRAVE - MUST OVERLAP WALL STRUCTURE BY 5mm MINIMUM
F	FIRE SEALS
G	STAINLESS STEEL SCREWS @ 400mm CENTRES, MINIMUM 40mm PENETRATION INTO WALL STRUCTURE
H	MAX. 10mm FITTING GAP TO BE FILLED WITH: H-A PR EXPANDING FOAM (E.G. SIKA BOOM) AND H-B INTUMESCENT MATERIAL (E.G. BOSS MASTIC) TO FILL FITTING VOID
I	TIMBER STUD

CORE	FUTURA
FRR	-/60/30 sm
STUD	TIMBER
JAMB "J"	J-54
WALL TYPE EXAMPLES	GBTL60b