


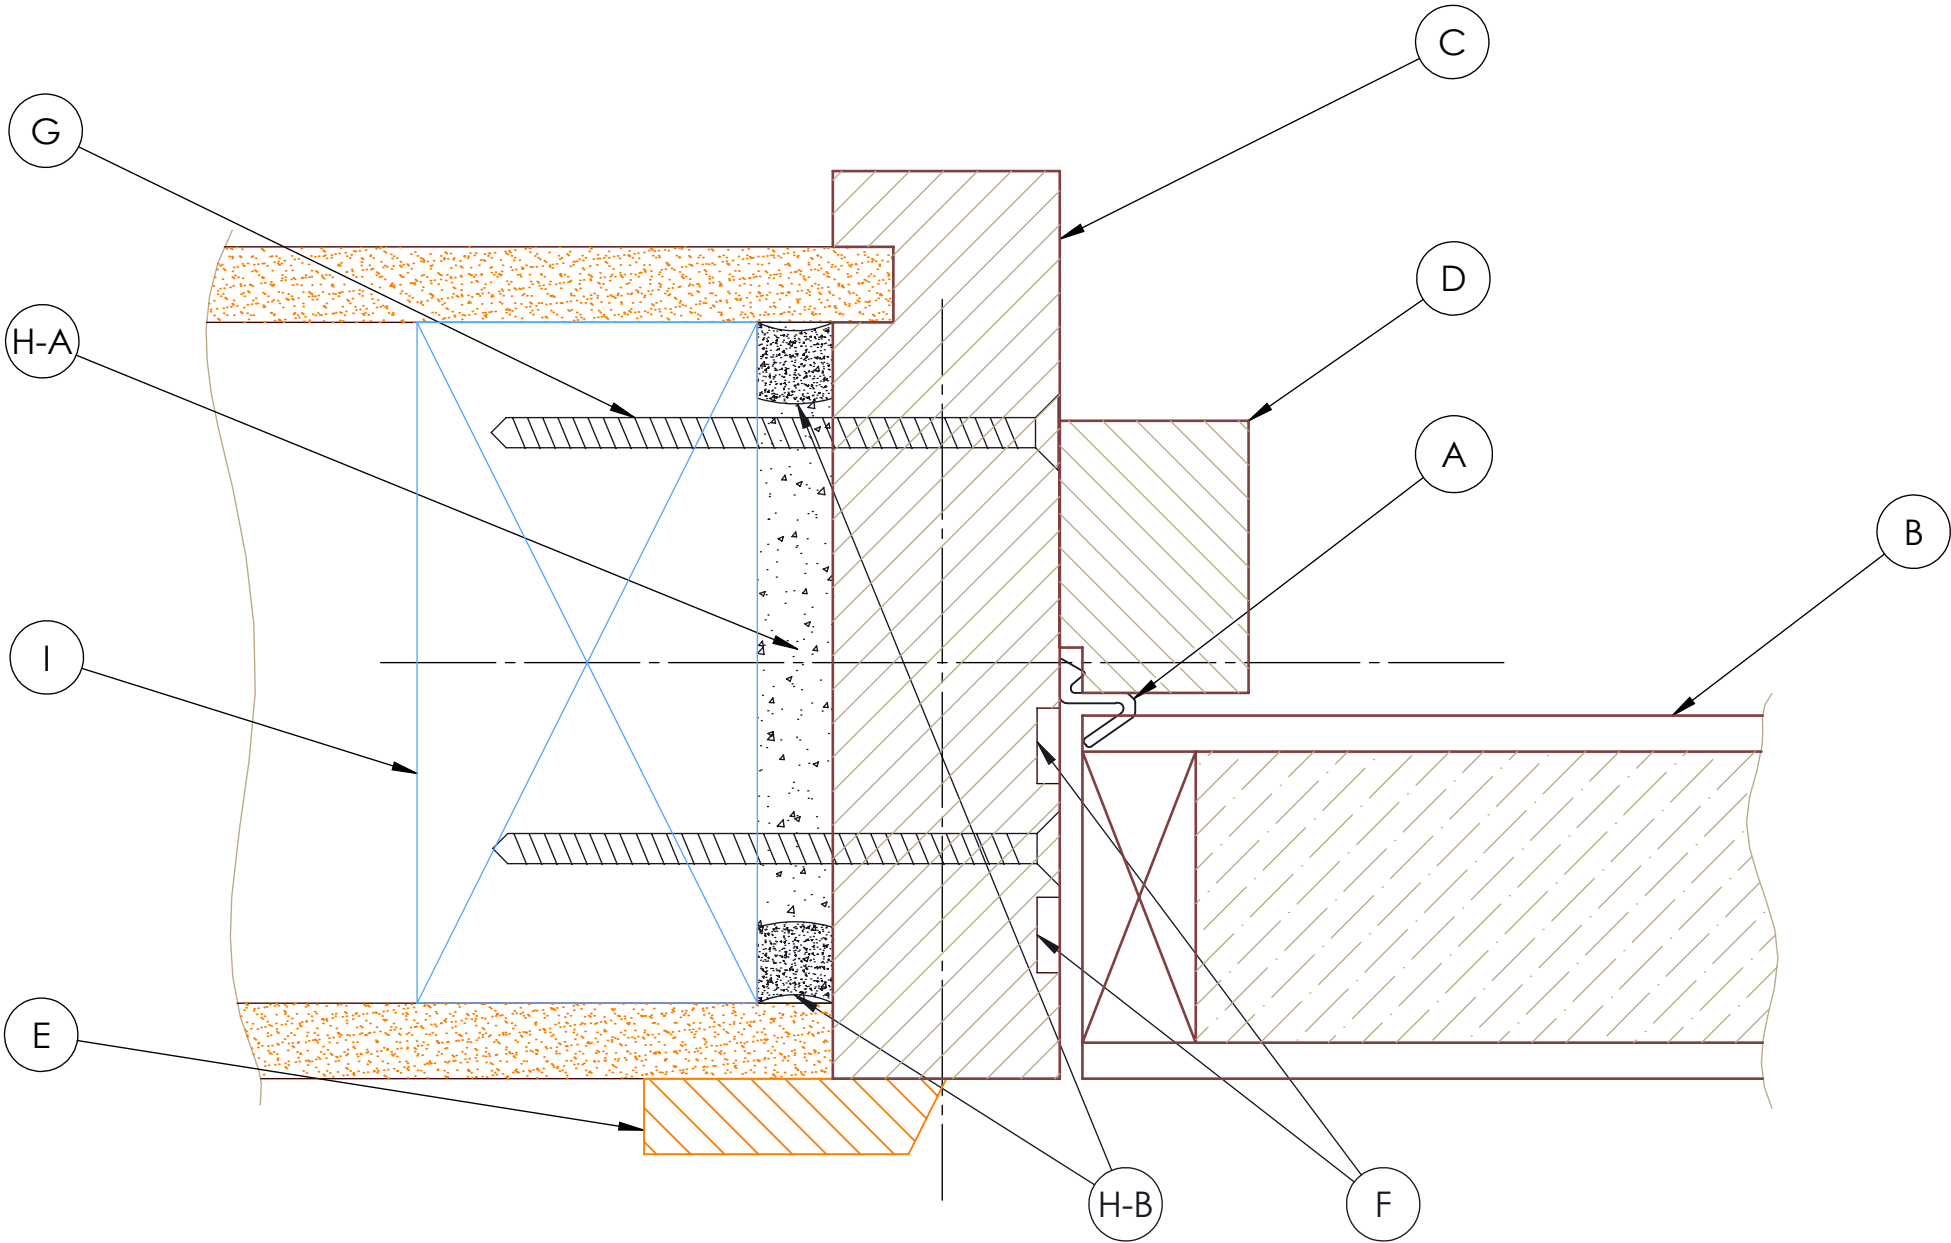

A	SQ21
B	48mm EUROPA DOOR
C	TIMBER JAMB (30 or 42 mm)
D	TIMBER DOOR STOP (36 X 25R)
E	TIMBER ARCHITRAVE (By Others Min. 40 X 10mm)
F	FIRE SEALS
G	STAINLESS STEEL SCREWS @ 400mm CENTRES
H	MAX. 10mm FITTING GAP TO BE FILLED WITH: H-A PR EXPANDING FOAM (E.G. SIKA BOOM) AND H-B INTUMESCENT MATERIAL (E.G. BOSS MASTIC) TO FILL FITTING VOID
I	TIMBER STUD

CORE	EUROPA
FRR	-/30/30 sm
STUD	TIMBER
JAMB "J"	J1S
WALL TYPE EXAMPLES	GBTL30, GBTL30b, GBTL30c